


# Getting Started Guide

## AWR Advantage

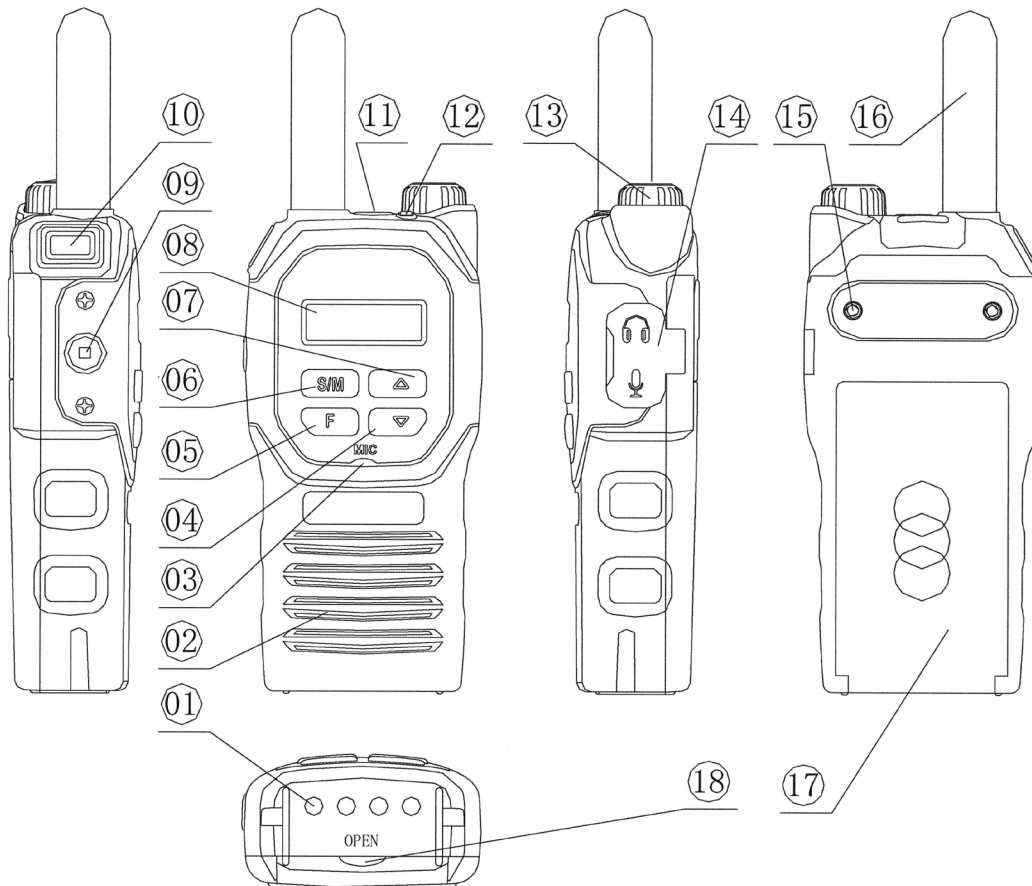

1. **Charger Terminal**
2. **Speaker**
3. **Microphone**
4. **▼, Channel Down Key**  
- Select item key in Local setting Mode
5. **F**, Programmable function key - Default: Key Lock @long press, Flashlight @short press, Exit current status key in local setting mode
6. **S/M**, Programmable function key - Default: Menu @ long press, Scan @short press
7. **▲, Channel Up Key** - Select item key in Local programming Mode
8. **LCD display** - refer to the below symbols list.
9. **SF2** , Programmable function key - Default: Channel view @short press, Monitor @long press
10. **SF1**, Programmable function key - default: PTT
11. **LED Flashlight**
12. **LED Indicator** (Tx & Busy)
13. **Power switch/ Volume Knob**
14. **Head set Jack /Programming Cable Jack**
15. **Belt clip screw hole**
16. **Antenna**
17. **Battery cover**
18. **Open slot for battery cover**