


# Getting Started Guide

## **AWR** **RB5000™**

### Two-way Radio Base Station

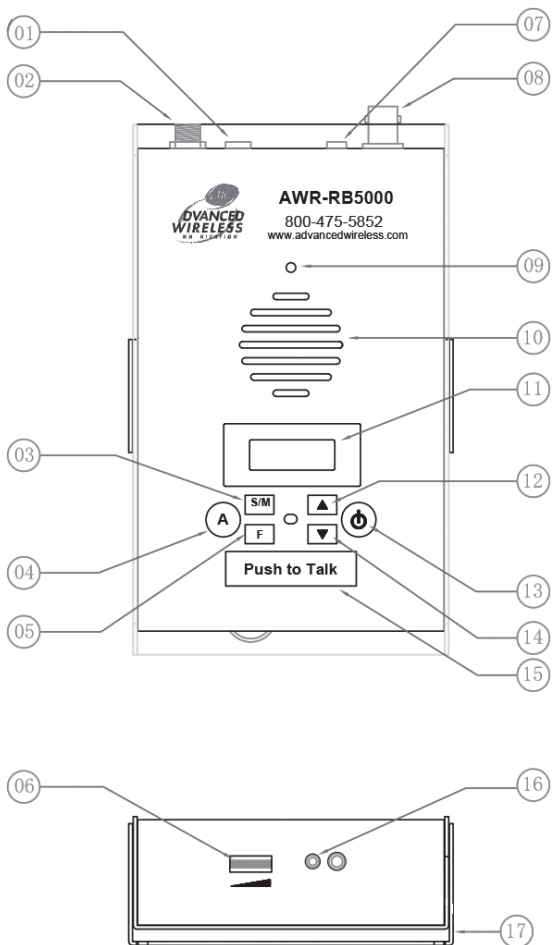

1. External Push-to-Talk Jack
2. DC Input
3. S/M Key (Programmable function key): Default - menu with long press, scan with short press
4. A Key (Programmable function key): Default - channel view with short press, monitor with long press
5. F Key (Programmable function key): Default - key Lock with long press, none with short press, exit current status key in local programming mode
6. Volume Adjustment Knob
7. External Speaker Jack
8. Antenna Jack
9. LED Indicator (Tx & Busy)
10. Speaker
11. LCD Display
12. ▲ (Channel Up Key): Select item key in local programming mode
13. Power Button
14. ▼ (Channel Down Key): Select item key in local programming mode
15. Push-to-Talk Key
16. Headset / Programming Jack
17. Bracket with Adjustable Angle
18. Adjustment Slot for Bracket

follow us on:



(952) 469-5400  
20809 Kensington Blvd., Lakeville, MN 55044  
www.advancedwireless.com